


# Walter of Wabash

## TL-107 Align-N-Lock Installation Instructions

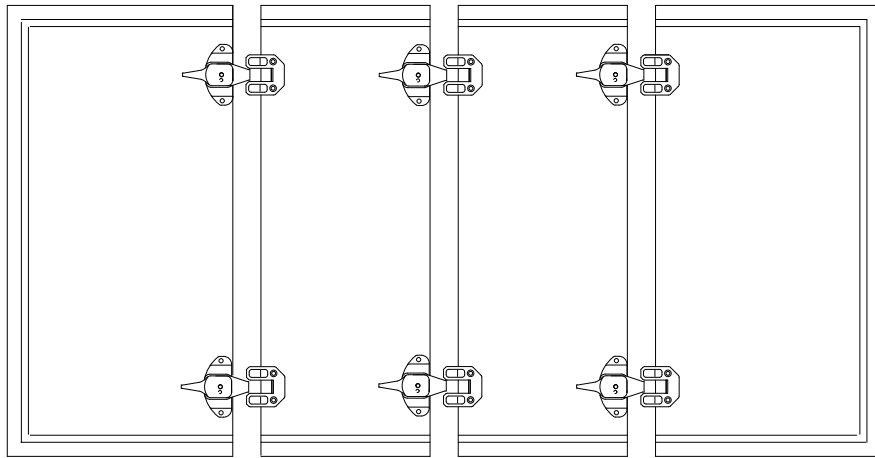

1. Lay your top upside down on a flat surface in the closed position (without leaves).
2. Layout lock base of the Align-N-Lock making sure that it is perpendicular to the edge of the table.
3. Attach lock base with either a #6 or #8 5/8" flat head screw. Although it is not necessary, we do recommend drilling pilot holes in order to prevent lead off when screws are installed.
4. Slide the aligning, leveling striker into the lock until the embossed line matches the edge of the top of leaf. Attach with #6 or #8 5/8" flat head screws. (Pre-drilling recommended)
5. Open table up far enough to accomodate one leaf, close on the leaf and repeat the process. It is important that you install the locks one leaf at a time to ensure proper alignment. Repeat this process until the locks are installed on all leaves.